
HW0748 Storage Solutions faulkner Free Standing

1800mm High

2 Door Pantry Slim Cupboard

ASSEMBLY INSTRUCTIONS (ASSEMBLE ON A LEVEL, CLEAN SURFACE)

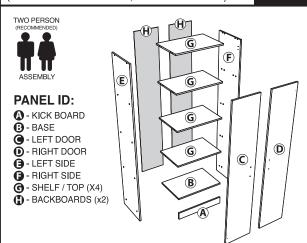

No	DIAGRAM / DESCRIPTION		Qty
1		UNITAR SCREW	20
2		WOOD DOWELS	24
3		HANDLE	2
4	{) 	M4 SCREW (18mm)	4
5		DOOR HINGE	6
6	Danamas-	M3.5 SCREW (16mm)	36
7		NAIL LEG STUD	4
8		BACKBOARD NAILS	40
9	9	UNITAR SCREW CAP	20
10		ALLEN KEY	1
11		ANTI TIP BRACKET	1
12	E	WALL PLUG	2
13	Dannannanan	M4 SCREW (30mm)	2
14	Datatatata-	M3.5 SCREW (16mm)	2

BLACK-BROWN FINISH 180cm H | 60cm W | 40cm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH, DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

! WARNING: Tip-over hazard.



WARNING: It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product by installing the ANTI-TIP BRACKET and SCREWS (Step 11) and ATTACHING the Faulkner 2 Door Pantry Slim Cupboard to a SOLID, FLAT WALL.


DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.

IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall items may be affected by thick carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).

Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits and fixings, and can offer suitable advice if needed. DO NOT place TV Sets or other heavy objects on top of this Unit. DO NOT overload the shelves of this Unit. **NEVER** allow children or adults to climb or hang on this Unit.

ASSEMBLY:

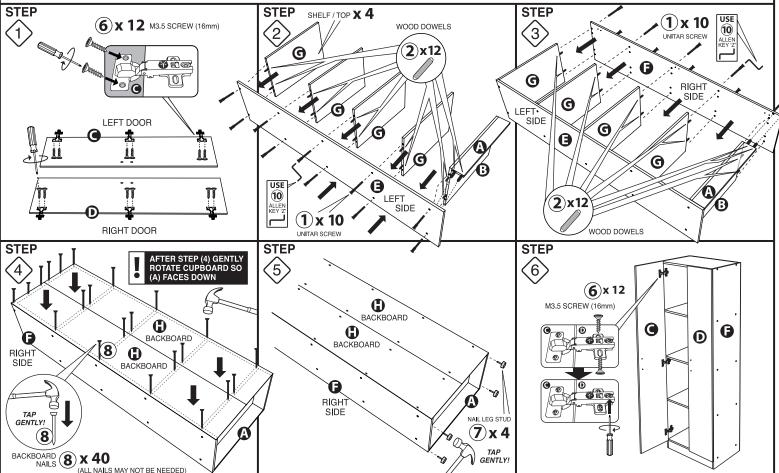




1800mm High

2 Door Pantry Slim Cupboard

ASSEMBLY INSTRUCTIONS (ASSEMBLE ON A LEVEL, CLEAN SURFACE) PAGE 2

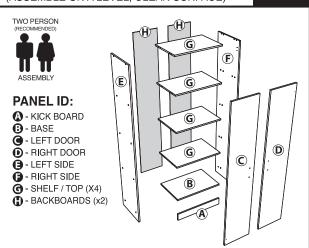

No	DIAGI	RAM / DESCRIPTION	Qty
1		UNITAR SCREW	20
2		WOOD DOWELS	24
3		HANDLE	2
4	{) 	M4 SCREW (18mm)	4
5		DOOR HINGE	6
6	Datamana>	M3.5 SCREW (16mm)	36
7		NAIL LEG STUD	4
8		BACKBOARD NAILS	40
9	9	UNITAR SCREW CAP	20
10		ALLEN KEY	1
11		ANTI TIP BRACKET	1
12	E	WALL PLUG	2
13	(000000000000000000000000000000000000	M4 SCREW (30mm)	2
14	Daaaaaaa>	M3.5 SCREW (16mm)	2

BLACK-BROWN FINISH

180cm H 60cm W 40cm D

DANGER

⚠ WARNING: Tip-over hazard. ⚠ WARNING: It is STRONGLY RECOMMENDED that you ANCHOR this product by installing the ANTI-TIP BRACKET and SCREWS (Step 11) and ATTACHING the Faulkner 2 Door Pantry Slim Cupboard to a SOLID, FLAT WALL.

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A

SOFT, DRY CLOTH, DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.


DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.


IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall items may be affected by thick carpets and uneven floors, or uneven and unstable walls.


SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).


Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits and fixings, and can offer suitable advice if needed. DO NOT place TV Sets or other heavy objects on top of this Unit. DO NOT overload the shelves of this Unit. **NEVER** allow children or adults to climb or hang on this Unit.

ASSEMBLY:

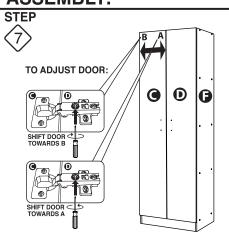

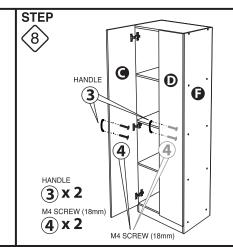

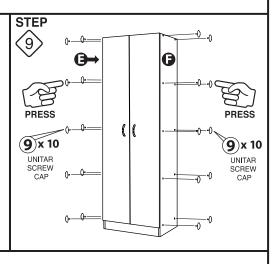

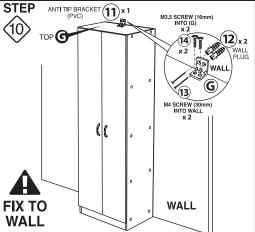

COMPLETE