faulkner **Storage** Solutions

HW0525


900mm High

2 Door Floor Cupboard

ASSEMBLY INSTRUCTIONS
(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PAGE 1

PANELS:

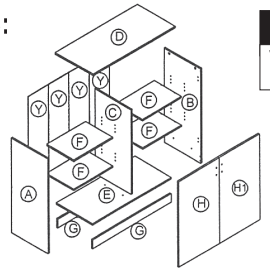


IMPORTANT
WHEN THE THIN EDGE OF A PANEL FACES FORWARD IN A UNIT, THAT EDGE SHOULD ALWAYS BE WHITE

TWO PERSON ASSEMBLY RECOMMENDED

No	DIAGRAM / DESCRIPTION	Qty
1	UNITAR SCREW (M6.3 x 40mm)	6
2	ALLEN KEY 'Z'	1
3	MOONSHAPE METAL HANDLE	2
	SCREW (M4 x 20mm)	4
4	MINI METAL DOOR HINGE	4 SETS
5	CSK SCREW (M3.5 x 16mm)	18
6	CAM	6
7	CAM BOLT	6
8	WOOD DOWEL (8 x 40mm)	10
9	NAIL LEG STUD	6
10	NAIL	40
11	UNITAR SCREW CAP	4
12	SHELF SUPPORT	16
13	ANTI-TIP BRACKET	1
14	WALL PLUG	2
15	SCREW (M4 x 30mm)	2

⚠ WARNING

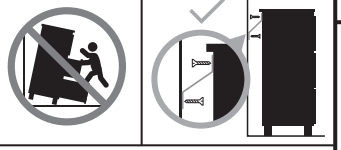

Children have died from furniture tipover.
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



WHITE MATT FINISH

90cm H	90cm W	41cm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

⚠ WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** and **SCREWS** (Step 13) and **ATTACHING** the *Faulkner 2 Door Floor Cupboard* to a **SOLID, FLAT WALL.**

⚠ DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.


IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained.Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).

Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.


ASSEMBLY:

STEP 1

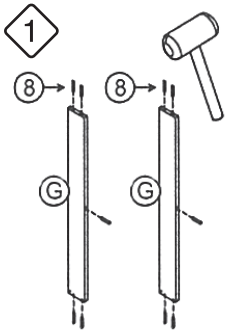


POSITION WOOD DOWEL. START ASSEMBLING BY FIXING WOOD DOWELS TO PANEL G.


STEP 2

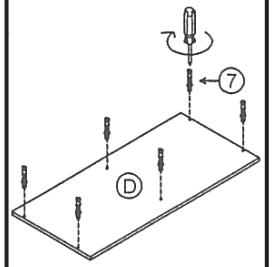


STEP 3

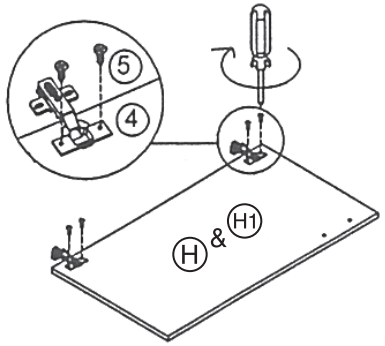


STEP 4

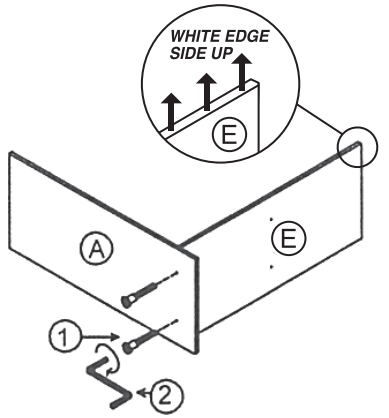

STEP 5

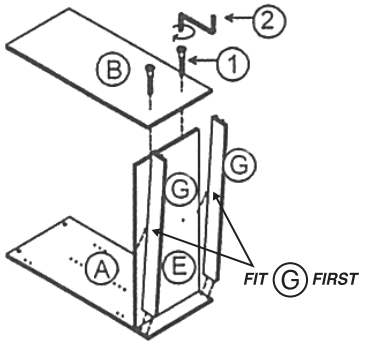


STEP 6

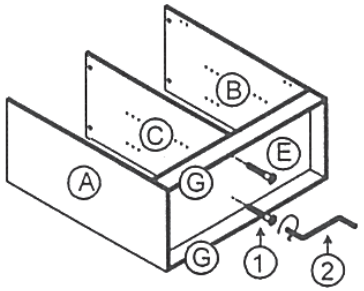

STEP 7

PRESS CAM TO THE BOTTOM OF THE HOLE AND MAKE SURE THE ARROW ON TOP OF EACH CAM IS POINTING TOWARDS THE CAM BOLT HOLE.

TURN CAM CLOCKWISE TO LOCK THE CAM TO THE CAM BOLT.

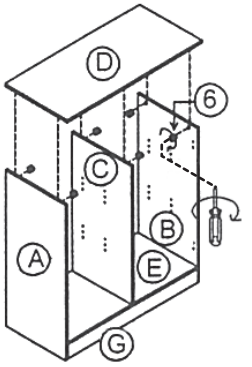

MADE IN CHINA

faulkner **Storage** Solutions

HW0525


900mm High

2 Door Floor Cupboard

ASSEMBLY INSTRUCTIONS
(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PAGE 2

PANELS:

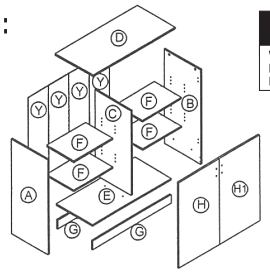


IMPORTANT
WHEN THE THIN EDGE OF A PANEL FACES FORWARD IN A UNIT, THAT EDGE SHOULD ALWAYS BE WHITE

TWO PERSON ASSEMBLY RECOMMENDED

No	DIAGRAM / DESCRIPTION	Qty
1	UNITAR SCREW (M6.3 x 40mm)	6
2	ALLEN KEY 'Z'	1
3	MOONSHAPE METAL HANDLE	2
	SCREW (M4 x 20mm)	4
4	MINI METAL DOOR HINGE	4 SETS
5	CSK SCREW (M3.5 x 16mm)	18
6	CAM	6
7	CAM BOLT	6
8	WOOD DOWEL (8 x 40mm)	10
9	NAIL LEG STUD	6
10	NAIL	40
11	UNITAR SCREW CAP	4
12	SHELF SUPPORT	16
13	ANTI-TIP BRACKET	1
14	WALL PLUG	2
15	SCREW (M4 x 30mm)	2

⚠ WARNING

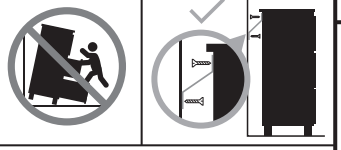

Children have died from furniture tipover.
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

WHITE MATT FINISH

90cm H	90cm W	41cm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

⚠ WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** and **SCREWS** (Step 13) and **ATTACHING** the *Faulkner 2 Door Floor Cupboard* to a **SOLID, FLAT WALL.**

⚠ DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.


IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained.Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).


Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.

ASSEMBLY: (cont)


STEP 8

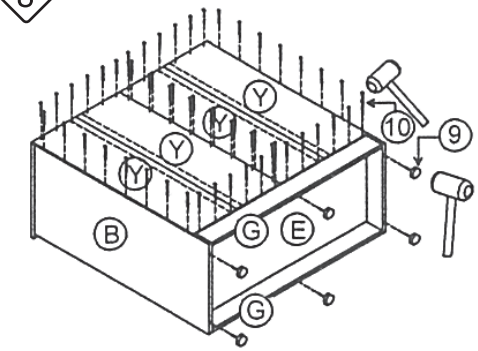


STEP 9

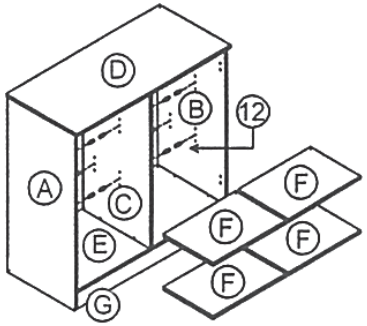


STEP 10

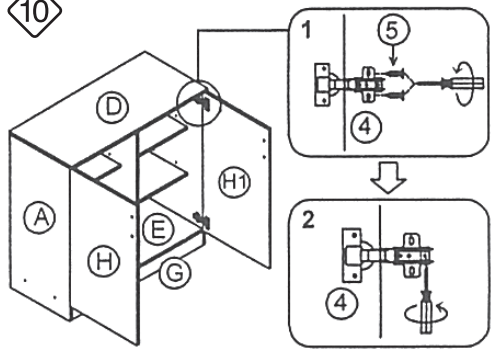


STEP 11

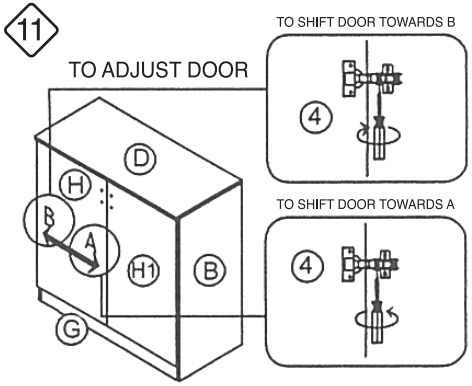

STEP 12

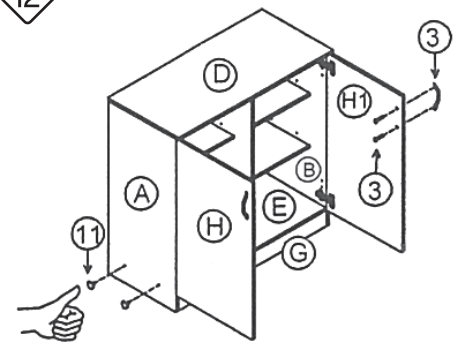

STEP 13

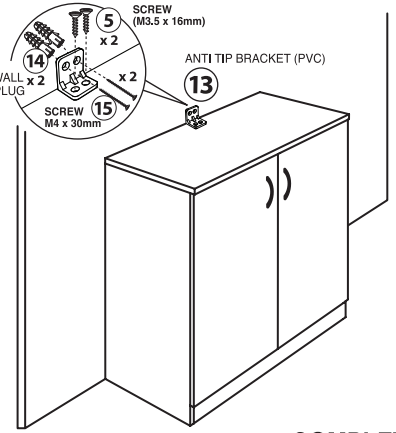

COMPLETE

MADE IN CHINA