



Storage
Solutions

HW0524


900mm High

1 Door Floor Cupboard

ASSEMBLY INSTRUCTIONS PAGE 1

(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PANELS:

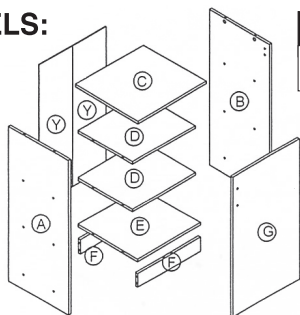


IMPORTANT
WHEN THE THIN EDGE OF A PANEL
FACES FORWARD IN A UNIT, THAT
EDGE SHOULD ALWAYS BE WHITE



No	DIAGRAM / DESCRIPTION	Qty
1	UNITAR SCREW (M6.3 x 40mm)	12
2	ALLEN KEY 'Z'	1
3	MOONSHAPE METAL HANDLE SCREW (M4 x 20mm)	1 2
4	MINI METAL DOOR HINGE	2 SETS
5	CSK SCREW (M3.5 x 16mm)	10
6	CAM	4
7	CAM BOLT	4
8	WOOD DOWEL (8 x 40mm)	8
9	NAIL LEG STUD	4
10	NAIL	30
11	UNITAR SCREW CAP	12
12	ANTI-TIP BRACKET	1
13	WALL PLUG	2
14	SCREW (M4 x 30mm)	2

WARNING

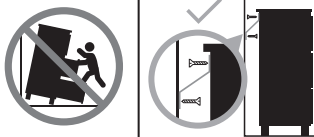

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



WHITE MATT FINISH

90cm H | 45cm W | 41cm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** and **SCREWS** (Step 11) and **ATTACHING** the *Faulkner 1 Door Floor Cupboard* to a **SOLID, FLAT WALL**.

DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.


IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).

Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.


ASSEMBLY:

STEP 1

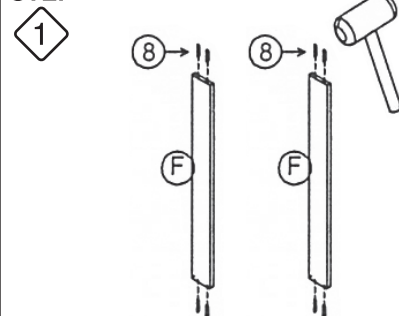


POSITION WOOD DOWEL.
START ASSEMBLING BY
FIXING WOOD DOWELS TO
PANEL F.


STEP 2

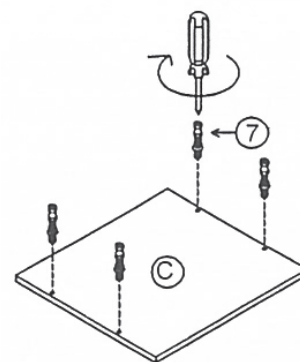


STEP 3

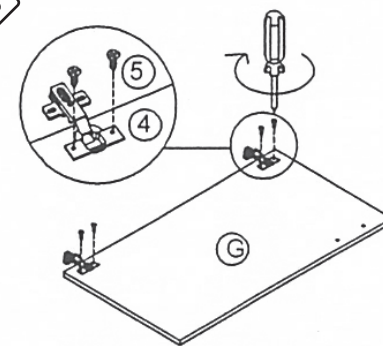

STEP 4

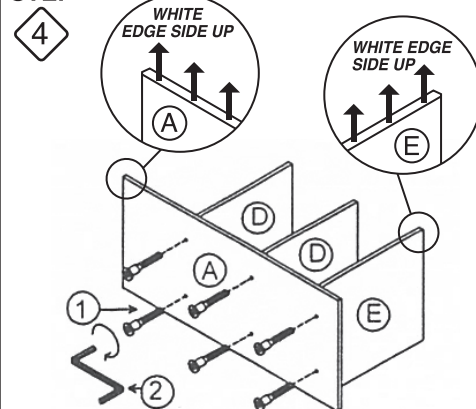


STEP 5

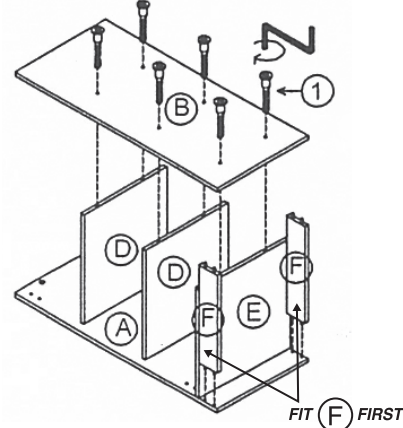

STEP 6

PRESS CAM TO THE
BOTTOM OF THE HOLE
AND MAKE SURE THE
ARROW ON TOP OF EACH
CAM IS POINTING TOWARD
THE CAM BOLT HOLE.
TURN CAM CLOCKWISE TO
LOCK THE CAM TO THE
CAM BOLT.

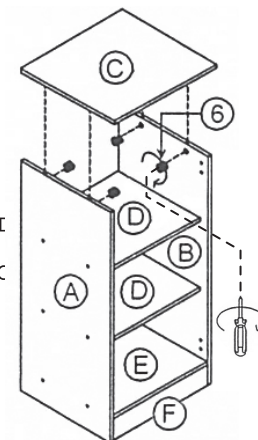



Storage
Solutions

HW0524


900mm High

1 Door Floor Cupboard

ASSEMBLY INSTRUCTIONS PAGE 2

(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PANELS:

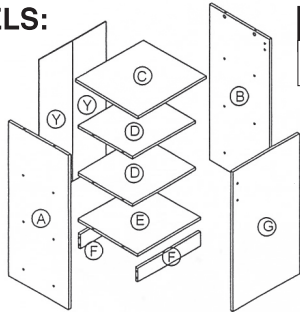


IMPORTANT
WHEN THE THIN EDGE OF A PANEL
FACES FORWARD IN A UNIT, THAT
EDGE SHOULD ALWAYS BE WHITE



No	DIAGRAM / DESCRIPTION	Qty
1	UNITAR SCREW (M6.3 x 40mm)	12
2	ALLEN KEY 'Z'	1
3	MOONSHAPE METAL HANDLE SCREW (M4 x 20mm)	1 2
4	MINI METAL DOOR HINGE	2 SETS
5	CSK SCREW (M3.5 x 16mm)	10
6	CAM	4
7	CAM BOLT	4
8	WOOD DOWEL (8 x 40mm)	8
9	NAIL LEG STUD	4
10	NAIL	30
11	UNITAR SCREW CAP	12
12	ANTI-TIP BRACKET	1
13	WALL PLUG	2
14	SCREW (M4 x 30mm)	2

WARNING

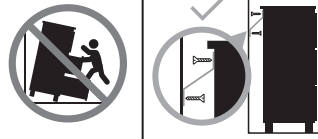

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



WHITE MATT FINISH

90cm H | 45cm W | 41cm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** and **SCREWS** (Step 11) and **ATTACHING** the *Faulkner 1 Door Floor Cupboard* to a **SOLID, FLAT WALL**.

DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.


IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).


Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.

ASSEMBLY: (cont)


STEP 7

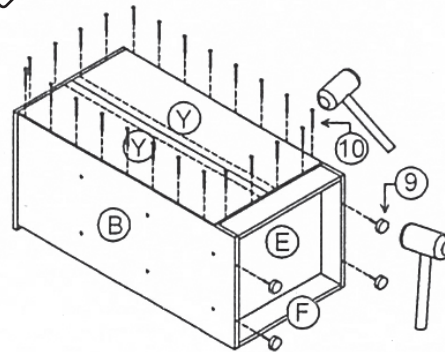


STEP 8

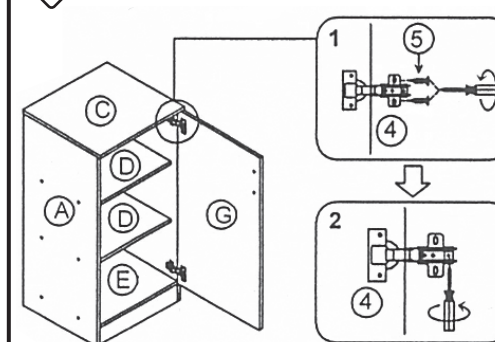


STEP 9

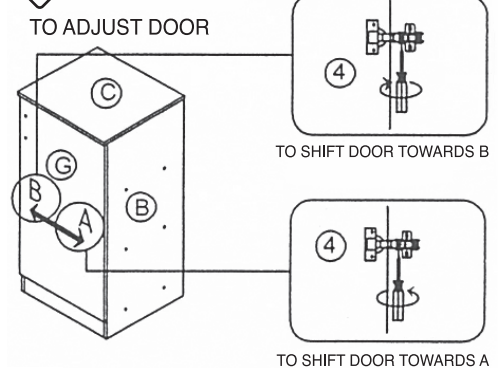

STEP 10

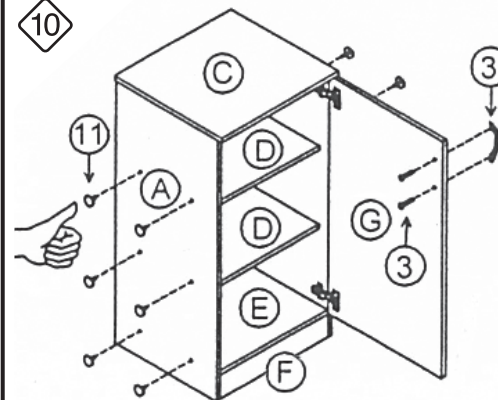

STEP 11

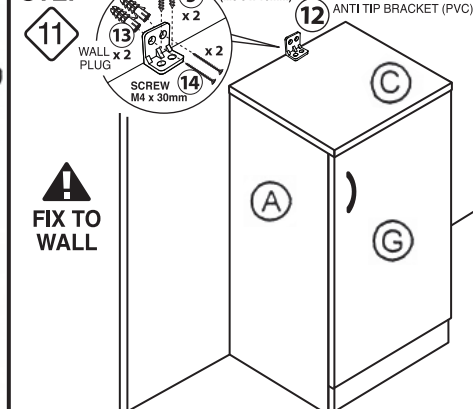

COMPLETE