


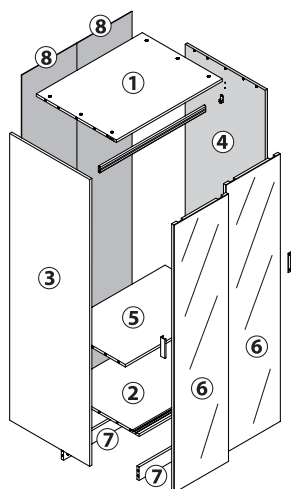

HW0923

1800mm High

2 Door Sliding Mirrored Wardrobe

ASSEMBLY INSTRUCTIONS PAGE 1
(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PANELS:

- 1 - TOP PANEL
- 2 - BASE PANEL
- 3 - LEFT SIDE
- 4 - RIGHT SIDE
- 5 - SHELF
- 6 - MIRROR DOOR (x2)
- 7 - TOE PANEL (x2)
- 8 - BACKBOARD (x2)



LIST OF PARTS:

ID	DIAGRAM / DESCRIPTION	Qty
A	MINIFIX	26
B	CAM LOCK	26
C	WOOD DOWEL	12
D	M3.5 SCREW (14mm)	36
E	HANGING RAIL BRACKET	2
F	HANGING RAIL	1
G	PIN BRACKET	4
H	WHEEL BRACKET	4
I	NAIL	40
J	NAIL LEG STUD	4
K	DOOR HANDLE SET (INCLUDES M3.5 SCREW (14mm))	1 SET
L	ANTI-TIP BRACKET SET	1 SET

WARNING



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



WHITE MATT FINISH

1800mm H | 800mm W | 580mm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** and **SCREWS** (Step 7) and **ATTACHING** the *Faulkner 2 Door Sliding Mirrored Wardrobe* to a **SOLID, FLAT WALL**.

DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.

IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.


SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).

Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.


ASSEMBLY:

IDENTIFYING THE TOP & BASE PANEL


NOTE: Panel gutter glide shapes

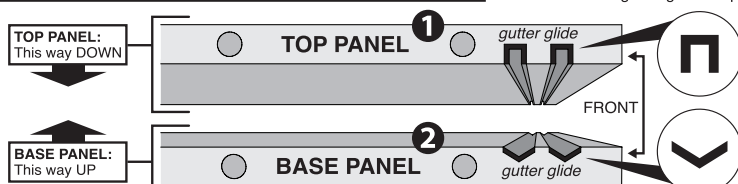


IDENTIFYING THE DOOR GLIDE MECHANISMS

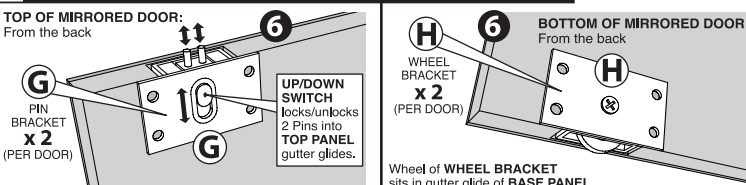


STEP 2

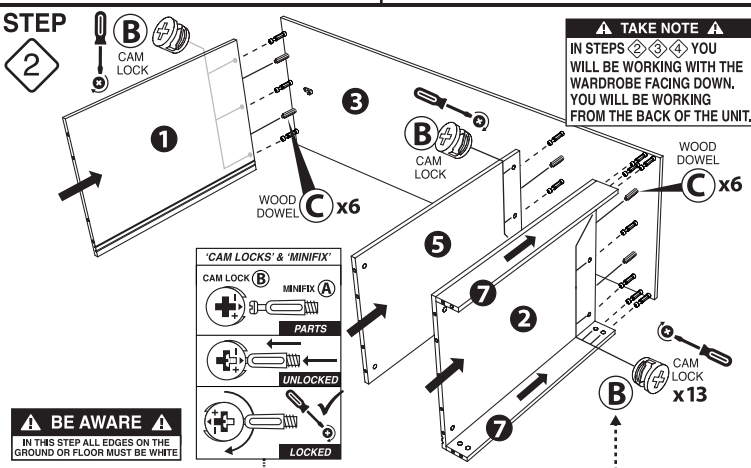

STEP 1

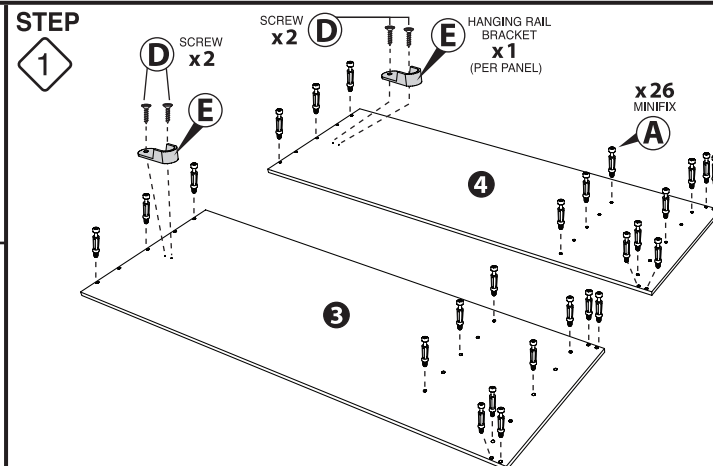

STEP 3

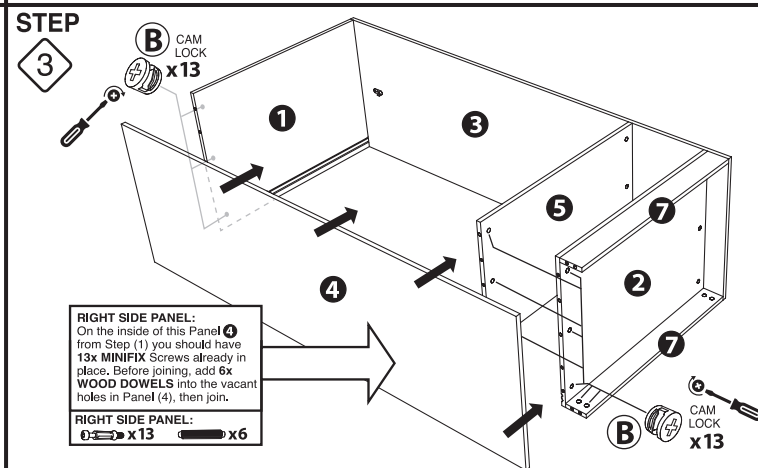



HW0923

1800mm High 2 Door Sliding Mirrored Wardrobe


ASSEMBLY INSTRUCTIONS PAGE 2

(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

TWO PERSON
ASSEMBLY

PANELS:

- 1 - TOP PANEL
- 2 - BASE PANEL
- 3 - LEFT SIDE
- 4 - RIGHT SIDE
- 5 - SHELF
- 6 - MIRRORED DOOR (x2)
- 7 - TOE PANEL (x2)
- 8 - BACKBOARD (x2)

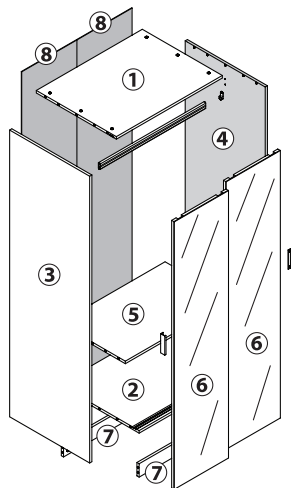

BE AWARE

WHEN THE THIN EDGE OF A PANEL
FACES FORWARD IN A UNIT, THAT
EDGE SHOULD ALWAYS BE WHITE

LIST OF PARTS:

ID	DIAGRAM / DESCRIPTION	Qty
A	MINIFIX	26
B	CAM LOCK	26
C	WOOD DOWEL	12
D	M3.5 SCREW (14mm)	36
E	HANGING RAIL BRACKET	2
F	HANGING RAIL	1
G	PIN BRACKET	4
H	WHEEL BRACKET	4
I	NAIL	40
J	NAIL LEG STUD	4
K	DOOR HANDLE SET (INCLUDES) M3.5 SCREW (14mm)	1 SET
L	ANTI-TIP BRACKET SET	1 SET

ASSEMBLY: (cont)


STEP 4

CAUTION

DO NOT ATTEMPT TO FIX THE BACKBOARDS 8 TO THE BACK OF THIS UNIT UNLESS YOU HAVE CHECKED THAT ALL OUTER UNIT CORNERS ARE SQUARE AND AT 90° DEGREES. TAKE MEASUREMENTS, USE A SPIRIT LEVEL, OR A 'TRY SQUARE' TO CONFIRM THAT THE UNIT IS SQUARE AND READY FOR FIXING THE BACKBOARDS 8 TO IT.

IMPORTANT



ALL PANELS MUST LINE UP 100% OF THE TIME AT 90° DEGREES. THIS INCLUDES THE OUTER UNIT, DOORS, SHELVES, MIRRORS & DRAWERS. THROUGH THE ASSEMBLY PROCESS MEASURE ALL CORNERS AND ENSURE THAT THEY ARE AT 90° DEGREES.

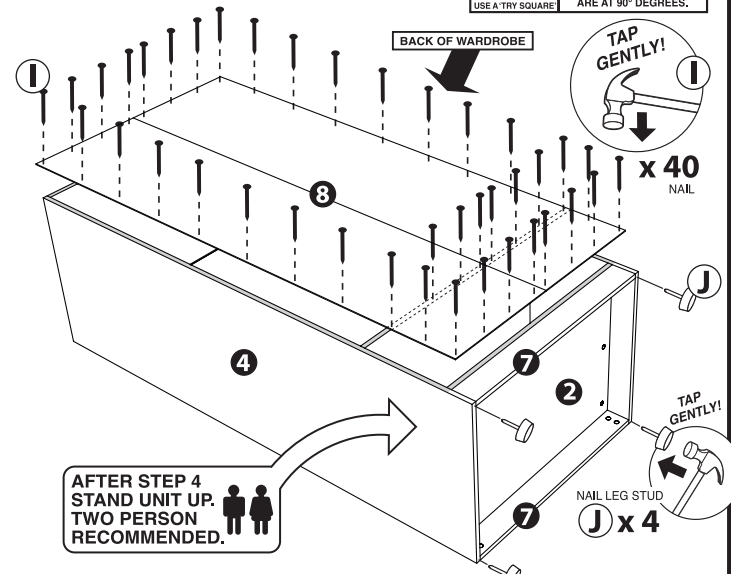


AFTER STEP 4
STAND UP UNIT.
TWO PERSON
RECOMMENDED.

STEP 6

INSTALLING THE DOORS

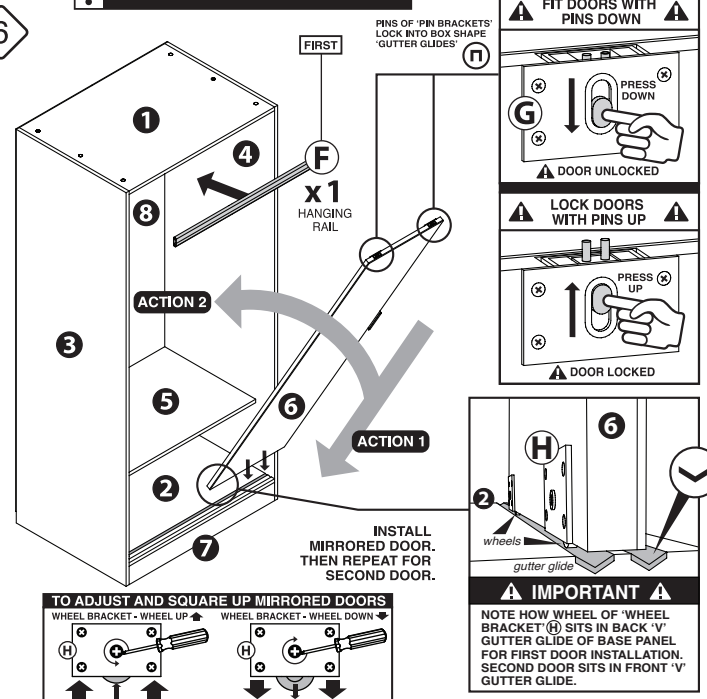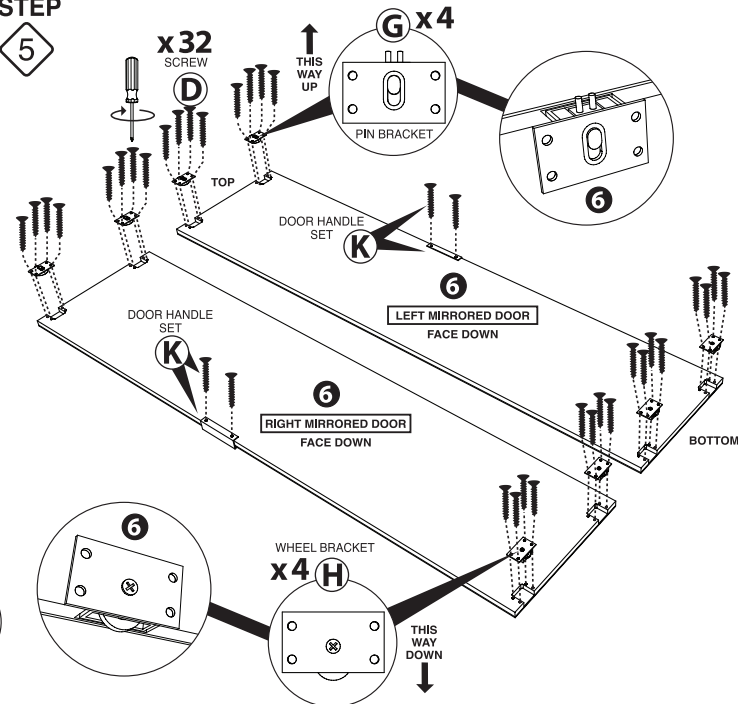**STEP 5****STEP 7**

FIX TO WALL

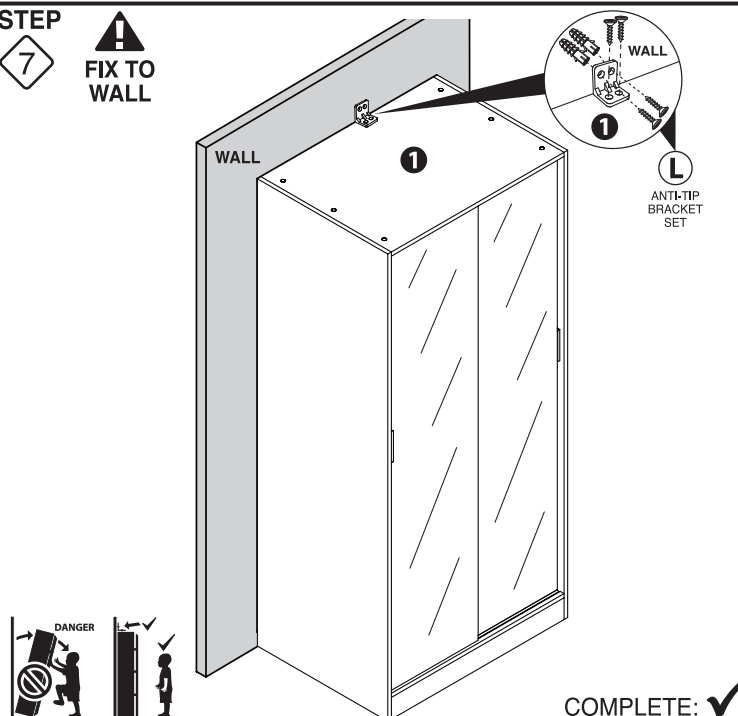

COMPLETE: ✓