



HW0929

Storage
Solutions

1800mm High


4 Shelf 2 Drawer Unit

ASSEMBLY INSTRUCTIONS PAGE 1
(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PANELS:

- 1 - TOP PANEL
- 2 - BASE PANEL
- 3 - LEFT SIDE
- 4 - RIGHT SIDE
- 5 - DRAWER SHELF
- 6 - SHELVES (x3)
- 7 - DRAWER FRONT (x2)
- 8 - DRAWER LEFT (x2)
- 9 - DRAWER RIGHT (x2)
- 10 - DRAWER BACK (x2)
- 11 - BACKBOARD (x2)
- 12 - DRAWER BASE (x2)


Note:
The difference between PANELS 1, 2, 5 & 6 is that PANEL 6 (x3) has NO holes on any side edges.

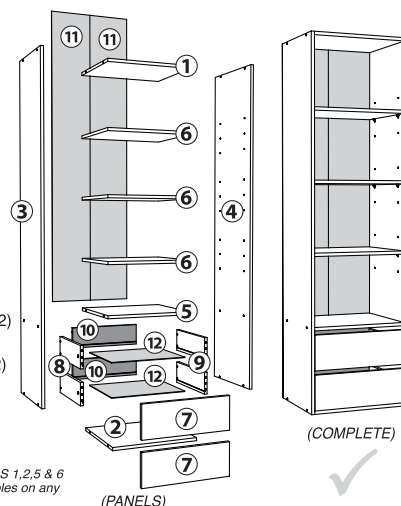

LIST OF PARTS:

ID	DIAGRAM / DESCRIPTION	Qty
A	MINIFIX	4
B	CAM LOCK	4
C	WOOD DOWEL	8
D	UNITAR SCREW	12
E	M3.5 SCREW (14mm)	16
F	M4 SCREW (40mm)	8
G	DRAWER SLIDE (CR) x2 DRAWER SLIDE (DR) x2 DRAWER SLIDE (CL) x2 DRAWER SLIDE (DL) x2	8 TOTAL RAILS
H	ADJUSTABLE SHELF SUPPORT	12
I	NAIL	30
J	NAIL LEG STUD	4
K	ALLEN KEY 'Z'	1
L	UNITAR SCREW CAPS	12
M	ANTI-TIP BRACKET SET	1 SET

WARNING

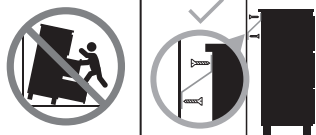

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



WHITE MATT FINISH

1800mm H | 500mm W | 410mm D

CARE CAUTION: TO CLEAN PARTICLE BOARD WITH MELAMINE FINISH, PLEASE CLEAN WITH A SOFT, DRY CLOTH. DO NOT USE CHEMICALS OR DETERGENTS AND AVOID WATER AND DIRECT SUNLIGHT.

WARNING: ALWAYS SECURE this product by installing the **ANTI-TIP BRACKET** & **SCREWS** (Step 7) & **ATTACHING** the *Faulkner 4 Shelf 2 Drawer Unit* to a **SOLID, FLAT WALL**.

DANGER: TOPPLING FURNITURE CAN CAUSE SERIOUS INJURIES AND DEATH.

IMPORTANT: Regularly check that Anti-Tip Bracket and Screws are securely maintained. Stability of tall item may be affected by carpets and uneven floors, or uneven and unstable walls.

SAFETY: Carefully check for any electrical wires or plumbing inside the wall before drilling any holes (If unsure, contact a qualified Tradesman).

Walls are constructed from different materials (i.e: Masonry = Solid Wall, Plasterboard = Hollow Wall) so it is important to use appropriate wall fixings and screws for your wall type. Your local Hardware Store will stock the necessary extra screws, drill bits fixings, and can offer suitable advice if needed.

ASSEMBLY:



! UNDERSTANDING THE DRAWER SLIDES **G** x 8

IDENTIFYING THE PARTS

TOGETHER

LEFT DRAWER SLIDES x2



APART



TOGETHER


RIGHT DRAWER SLIDES x2

APART

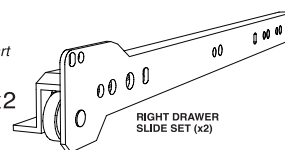


**Note: Look for pressed markings CL or DL or CR or DR on each part*

STEP ATTACH DRAWER SLIDES (CL & CR) x2 TO SIDE PANELS

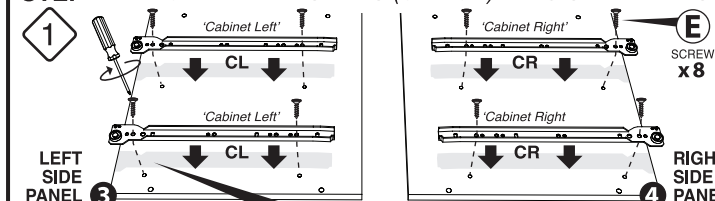


'CABINET SLIDES' attach to specific holes on side panels:
Cabinet Left Slide attaches to HOLES 2 & 11.
Cabinet Right Slide mirrors that.

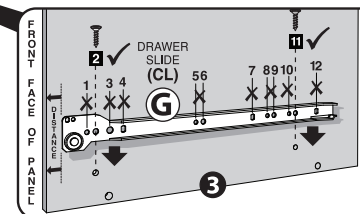

STEP

2

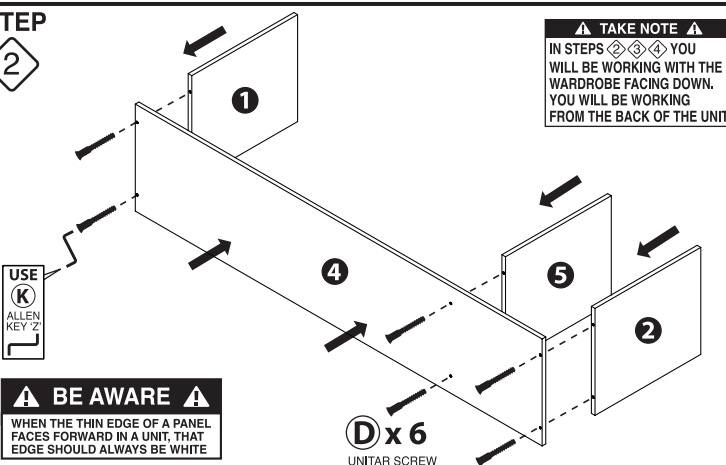


TAKE NOTE
IN STEPS 2, 3, 4 YOU WILL BE WORKING WITH THE WARDROBE FACING DOWN. YOU WILL BE WORKING FROM THE BACK OF THE UNIT.



BE AWARE
WHEN THE THIN EDGE OF A PANEL FACES FORWARD IN A UNIT, THAT EDGE SHOULD ALWAYS BE WHITE

STEP

3

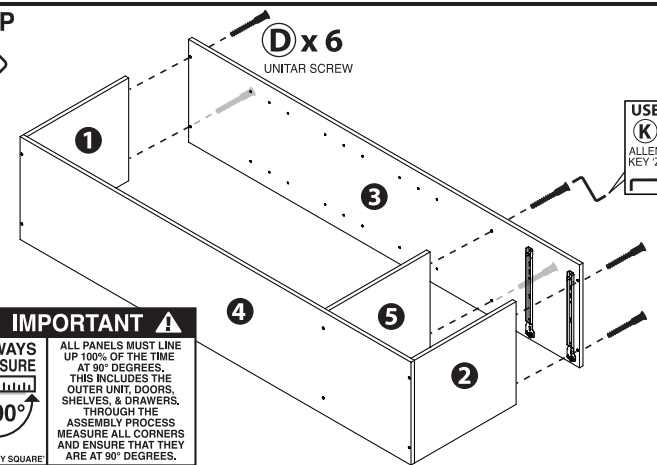

IMPORTANT
ALWAYS MEASURE
ALL PANELS MUST LINE UP 100% OF THE TIME AT 90° DEGREES. THIS INCLUDES THE OUTER UNIT, DOORS, SHELVES, & DRAWERS. THROUGH THE ASSEMBLY PROCESS MEASURE ALL CORNERS AND ENSURE THAT THEY ARE AT 90° DEGREES.



HW0929

Storage
Solutions


1800mm High

4 Shelf 2 Drawer Unit

ASSEMBLY INSTRUCTIONS PAGE 2
(ASSEMBLE ON A LEVEL, CLEAN SURFACE)

PANELS:

- 1 - TOP PANEL
- 2 - BASE PANEL
- 3 - LEFT SIDE
- 4 - RIGHT SIDE
- 5 - DRAWER SHELF
- 6 - SHELVES (x3)
- 7 - DRAWER FRONT (x2)
- 8 - DRAWER LEFT (x2)
- 9 - DRAWER RIGHT (x2)
- 10 - DRAWER BACK (x2)
- 11 - BACKBOARD (x2)
- 12 - DRAWER BASE (x2)

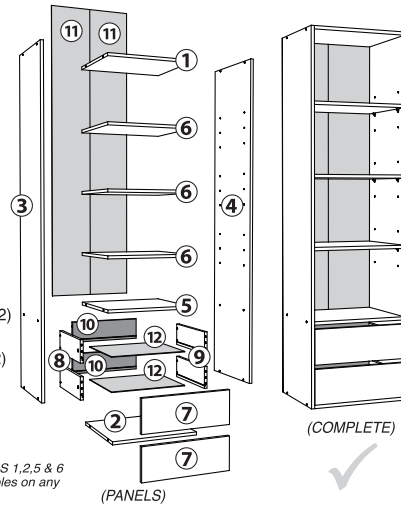

Note:
The difference between PANELS 1, 2, 5 & 6 is that PANEL 6 (x3) has NO holes on any side edges.

LIST OF PARTS:

ID	DIAGRAM / DESCRIPTION	Qty
A	MINIFIX	4
B	CAM LOCK	4
C	WOOD DOWEL	8
D	UNITAR SCREW	12
E	M3.5 SCREW (14mm)	16
F	M4 SCREW (40mm)	8
G	DRAWER SLIDE (CR) x2 DRAWER SLIDE (DR) x2 DRAWER SLIDE (CL) x2 DRAWER SLIDE (DL) x2	8 TOTAL RAILS
H	ADJUSTABLE SHELF SUPPORT	12
I	NAIL	30
J	NAIL LEG STUD	4
K	ALLEN KEY 'Z'	1
L	UNITAR SCREW CAPS	12
M	ANTI-TIP BRACKET SET	1 SET

ASSEMBLY: (cont)




STEP
4

CAUTION

DO NOT ATTEMPT TO FIX THE BACKBOARDS (11) TO THE BACK OF THIS UNIT UNLESS YOU HAVE CHECKED THAT ALL OUTER UNIT CORNERS ARE SQUARE AND AT 90° DEGREES. TAKE MEASUREMENTS, USE A SPIRIT LEVEL, OR A 'TRY SQUARE' TO CONFIRM THAT THE UNIT IS SQUARE AND READY FOR FIXING THE BACKBOARDS (11) TO IT.

IMPORTANT

ALL PANELS MUST LINE UP 100% OF THE TIME AT 90° DEGREES. THIS INCLUDES THE OUTER UNIT, DOORS, SHELVES, & DRAWERS. THROUGH THE ASSEMBLY PROCESS MEASURE ALL CORNERS AND ENSURE THAT THEY ARE AT 90° DEGREES.

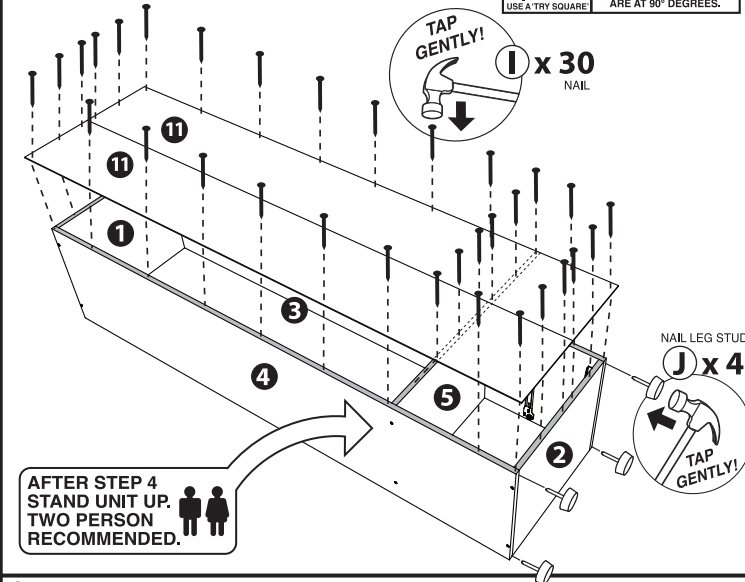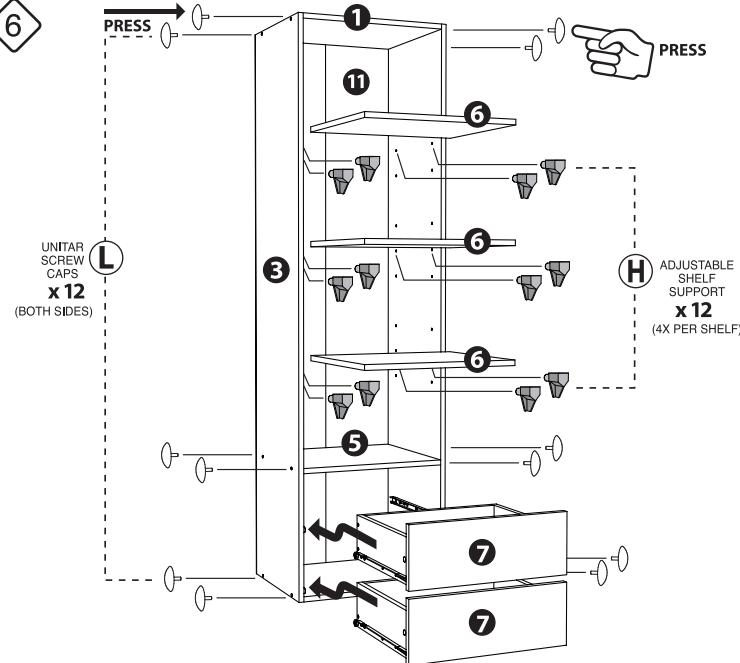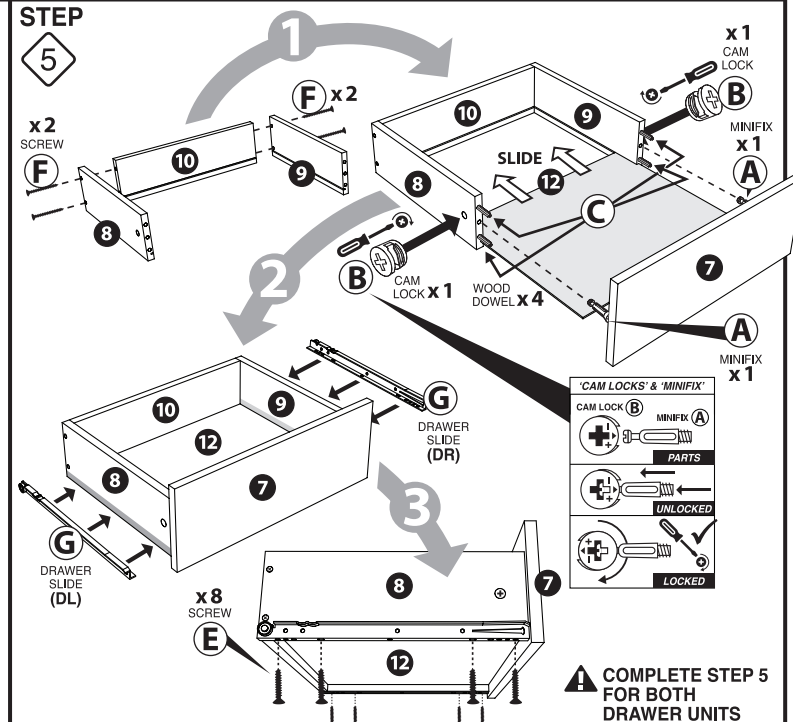STEP
6STEP
5STEP
7